RONDA startech – Movement Cal. 5040.E & 5040.D User's Manual English

You have decided to buy a watch, which was assembled by a watch-maker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda Brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

Control buttons

Description of the display and control buttons

Display elements

Second hand



Chronograph: Basic function

Stop: to stop the timing, press push-button A once more and read the chronograph counters: 4 min/38 sek/ ⁷/₁₀ sec

3 Zero positioning: Press push-button B. (The chronograph hands will be reset to their zero positions.)

2 Stop: (e.g. 15 min 5 sec following 1)

The chronograph hands are returned to their zero positions.

Please note * Following (), the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...).

Intermediate or interval timing

Example: Start: (start timing) Display interval: e.g. 20 minutes 17 seconds (timing continues in the background) Continues in the background) (The chronograph hands are quickly advanced to the ongoing measured time.) Stop: (Final time is displayed) Reset:

Please note * Following (2), further intervals or inter-mediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

Adjusting the chronograph hands to zero position

Example: One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).

(Start / Stop / Reset)

Example: Start: Press push-button A

Chronograph: Accumulated timing


Example: **1** Start: (start timing)

6 Reset:


Chronograph:


Example:

6

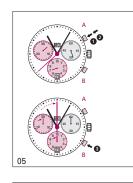


WWW.COVERWATCHES.COM

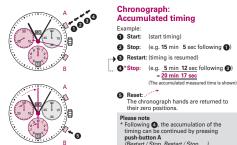

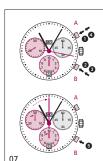

06

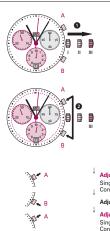







 Returning the crown to position I Termination of the chronograph hands adjustment (can be carried out at any time).

0

1

08


CE


Battery type: 395 (diameter 9.5 mm x 2.6 mm / SR 927 SW) Accuracy: +20 / -10 seconds per month



06/2014

<u>x</u>

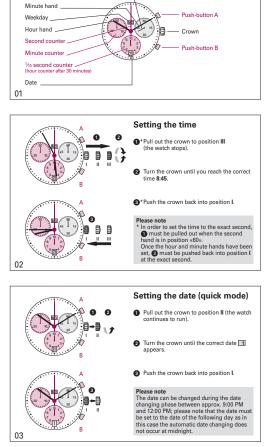

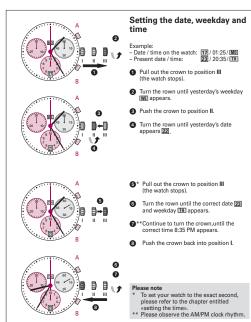

04